 
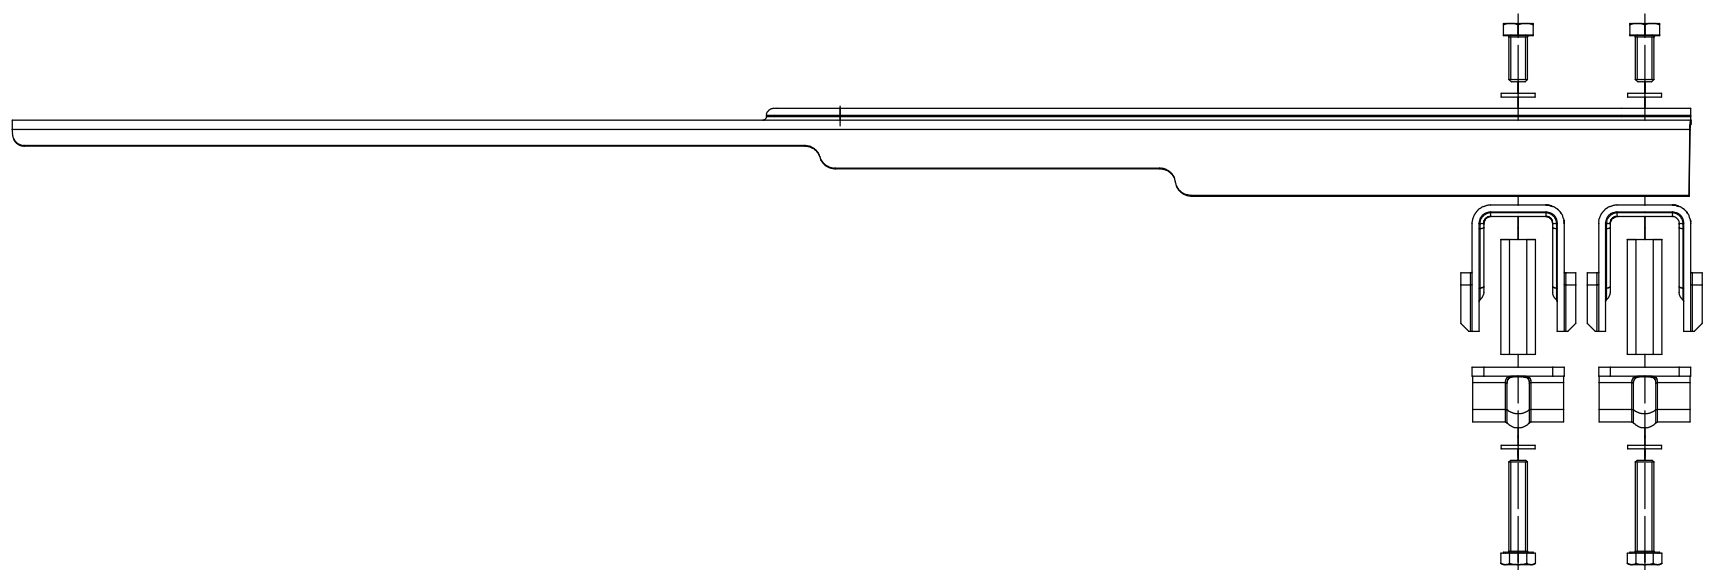 


BT-Ex1-000F-M for Ex-Lin 3L-5L 1

holder across, 0 degrees / for pole diameters of 42 - 76 mm

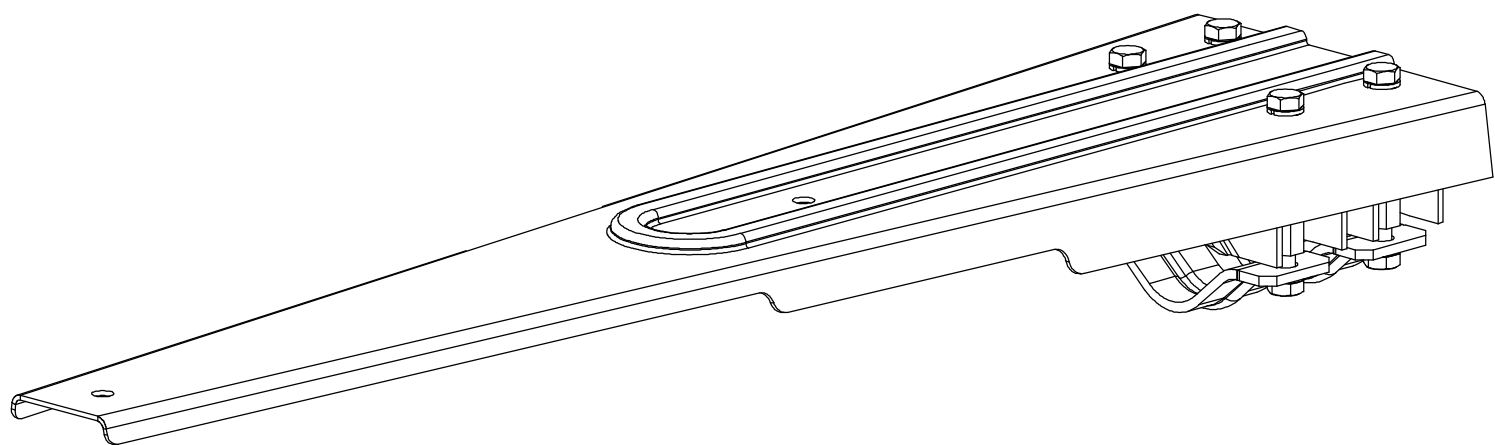

 
 
explosion
proof
experts

ATEX
WORKSHOP

ATEX Workshop B.V.
Hofkamp 30
6161 DC Geleen
+31 46 303 09 08
www.atexworkshop.com

BT-Ex1-090F-M for Ex-Lin 3L-5L 1

holder across, 90 degrees / for pole diameters of 42 - 76 mm

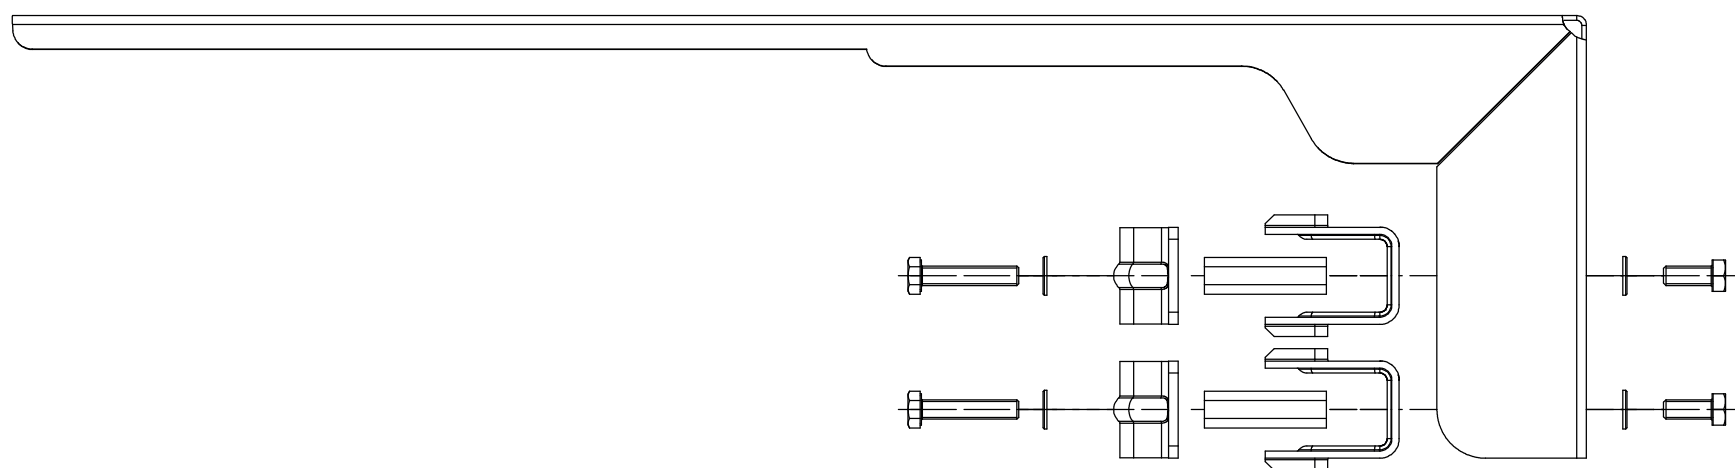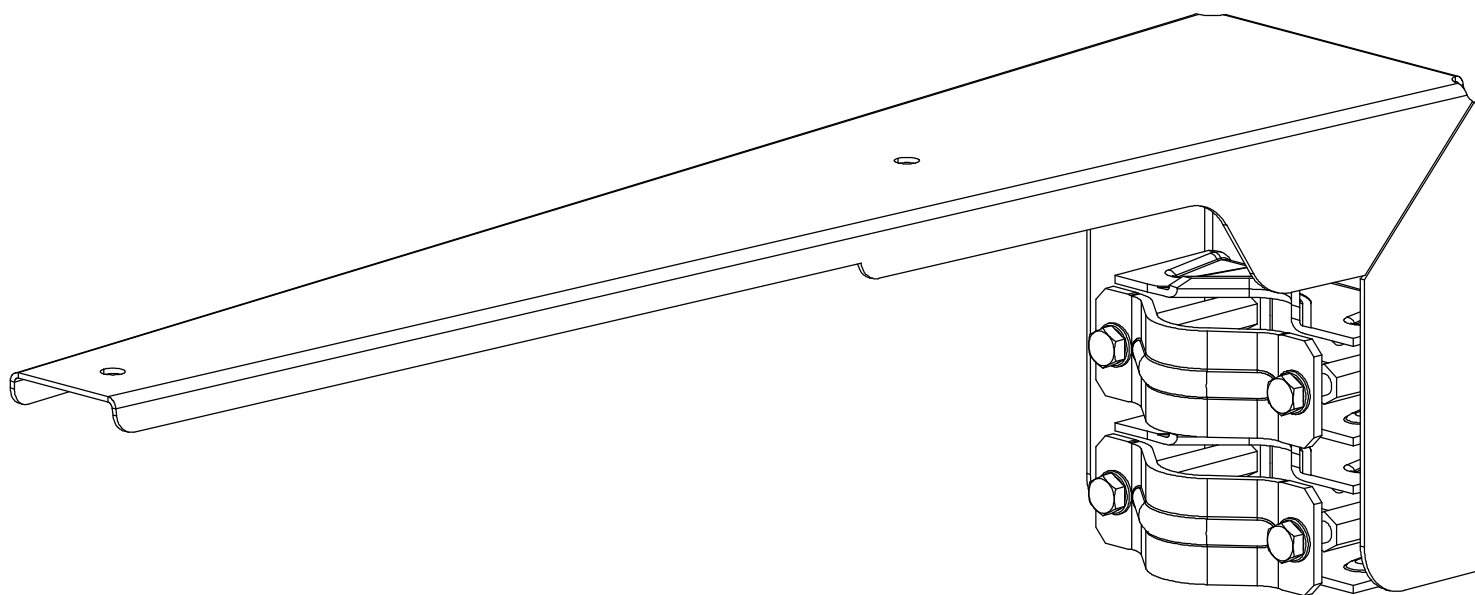


explosion
proof
experts

ATEX
WORKSHOP

ATEX Workshop B.V.
Hofkamp 30
6161 DC Geleen
+31 46 303 09 08
www.atexworkshop.com

BT-Ex1-105F-M for Ex-Lin 3L-5L 1

 holder across, 105 degrees / for pole diameters of 42 - 76 mm

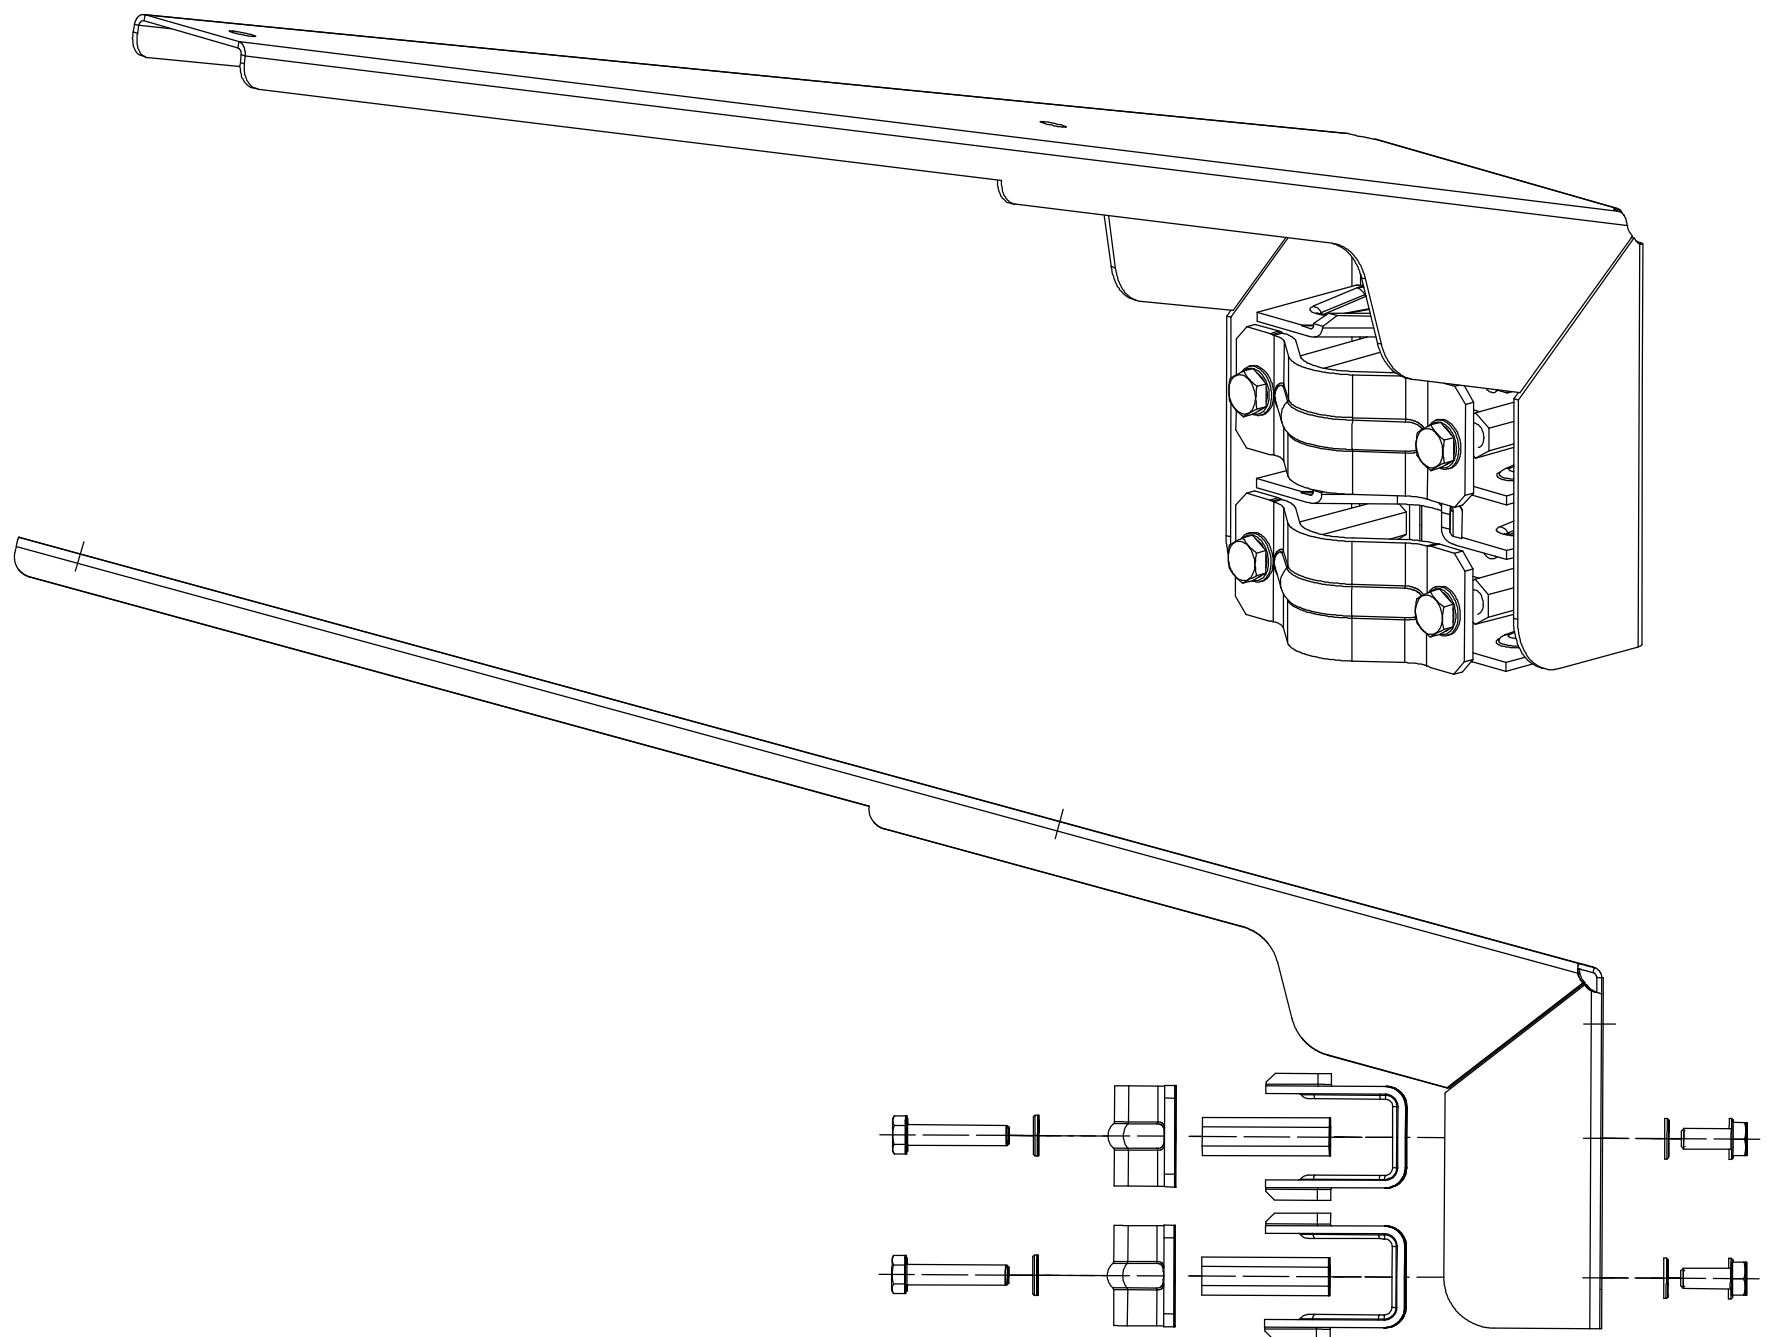


explosion
proof
experts

ATEX
WORKSHOP

ATEX Workshop B.V.
Hofkamp 30
6161 DC Geleen
+31 46 303 09 08
www.atexworkshop.com

BT-Ex1-120F-M for Ex-Lin 3L-5L 1

 holder across, 120 degrees / for pole diameters of 42 - 76 mm

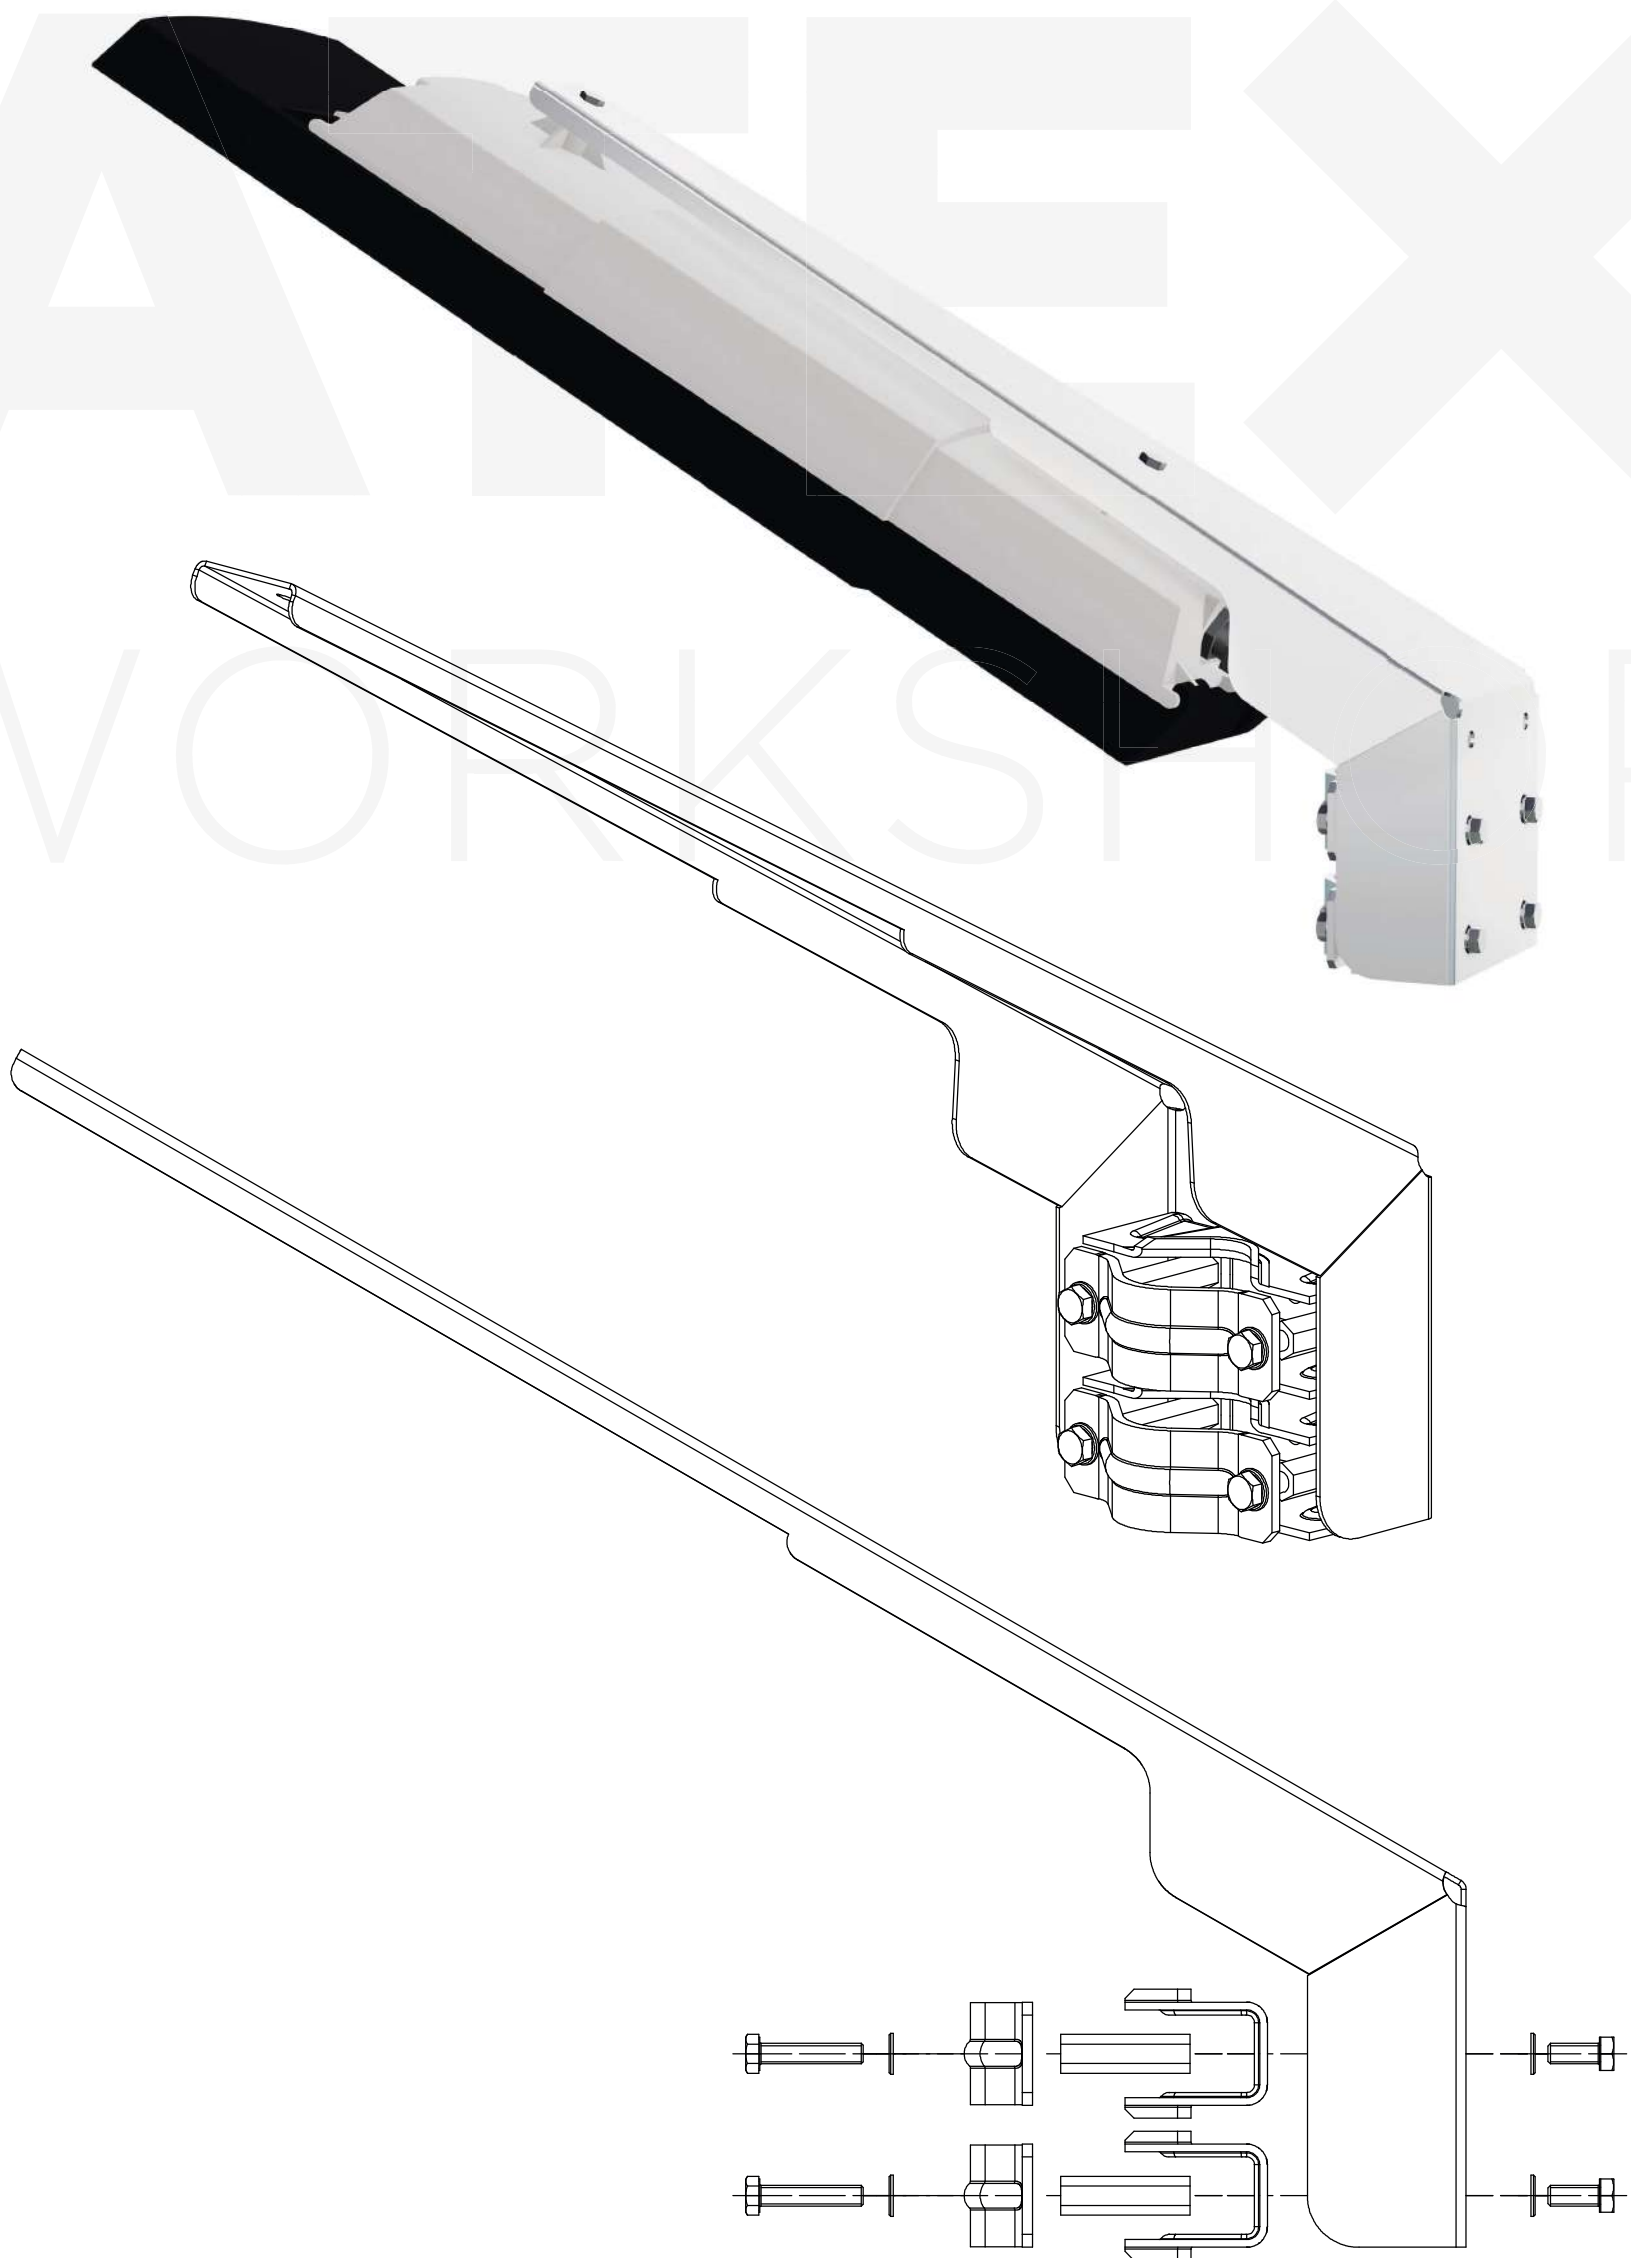




explosion
proof
experts

ATEX
WORKSHOP

ATEX Workshop B.V.
Hofkamp 30
6161 DC Geleen
+31 46 303 09 08
www.atexworkshop.com

BT-Ex2-000F-M for Ex-Lin 5L-10L 2

   holder across, 0 degrees / for pole diameters of 42 - 76 mm

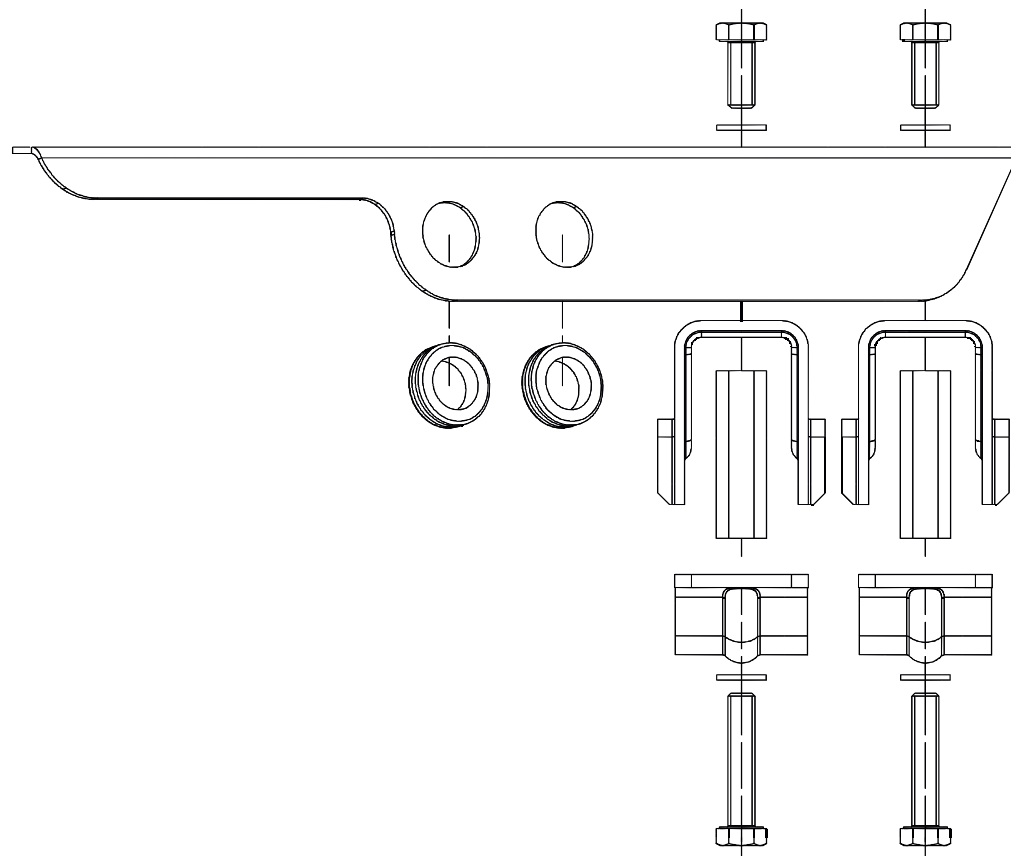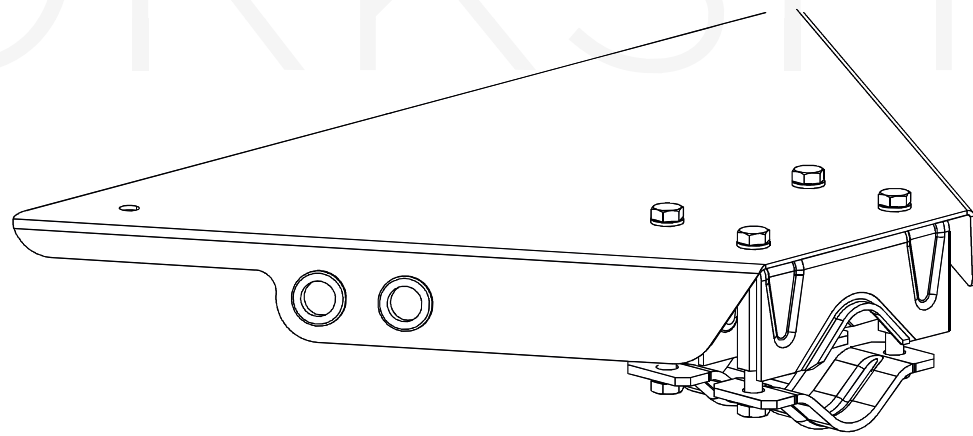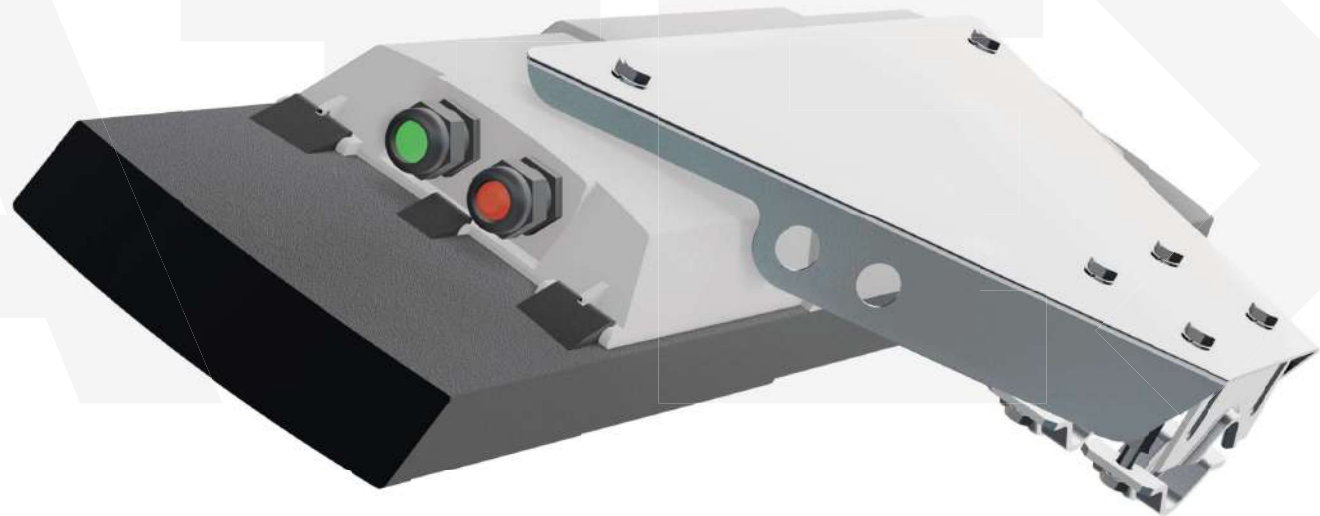




explosion
proof
experts

ATEX
WORKSHOP

ATEX Workshop B.V.
Hofkamp 30
6161 DC Geleen
+31 46 303 09 08
www.atexworkshop.com

BT-Ex2-090F-M for Ex-Lin 5L-10L 2

   holder across, 90 degrees / for pole diameters of 42 - 76 mm

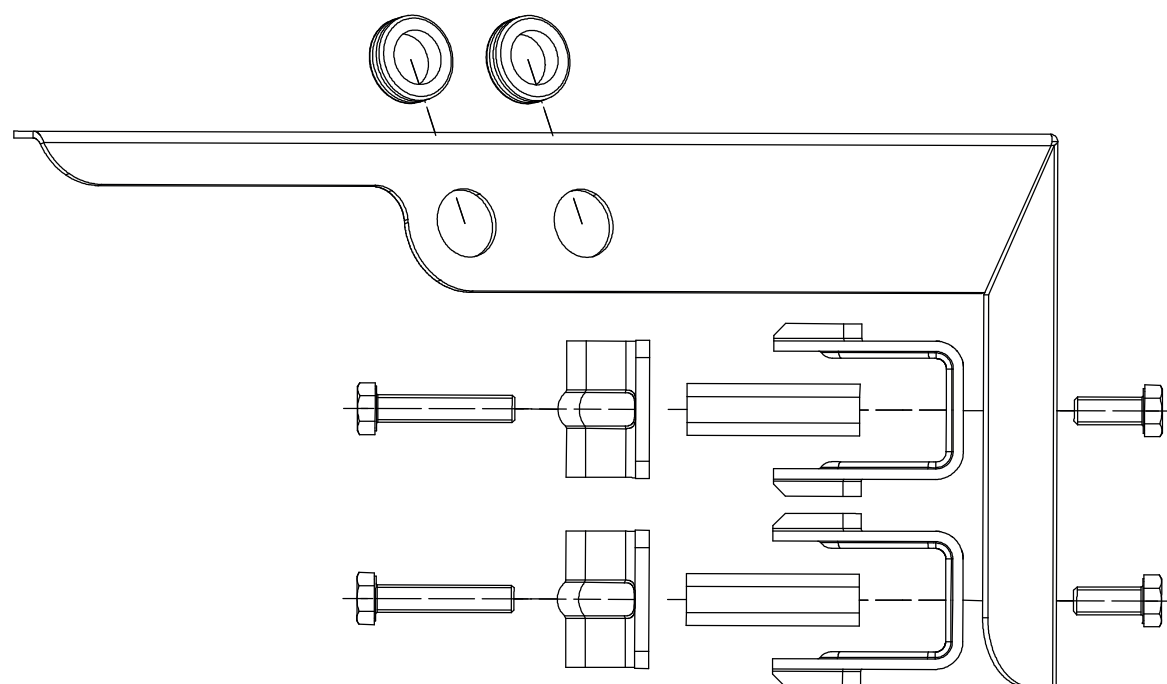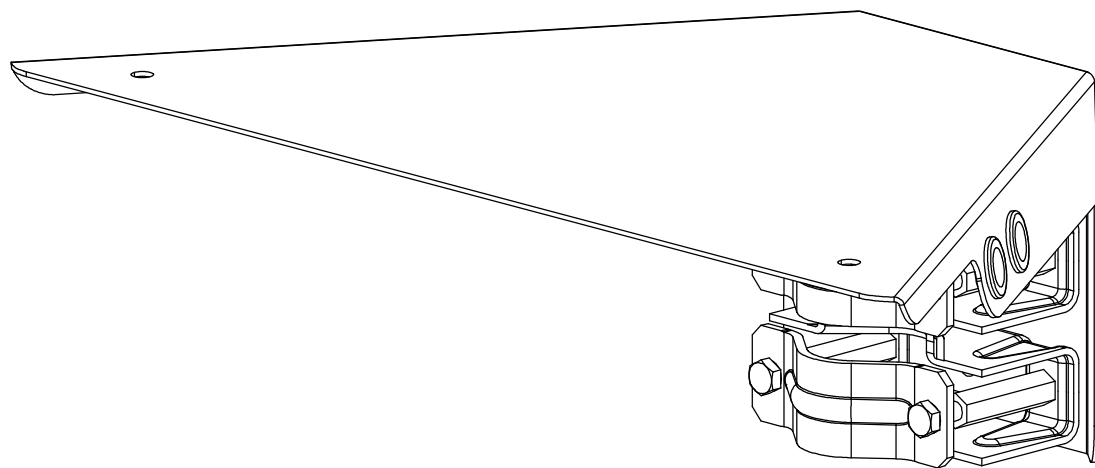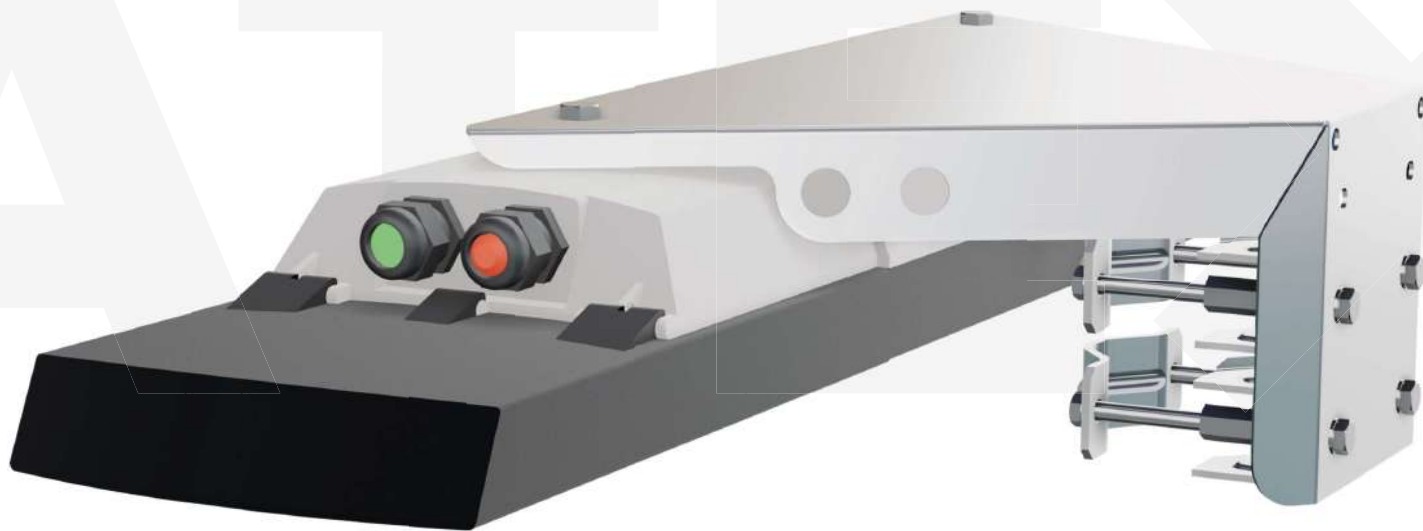




explosion
proof
experts

ATEX
WORKSHOP

ATEX Workshop B.V.
Hofkamp 30
6161 DC Geleen
+31 46 303 09 08
www.atexworkshop.com

BT-Ex2-105F-M for Ex-Lin 5L-10L 2

   holder across, 105 degrees / for pole diameters of 42 - 76 mm

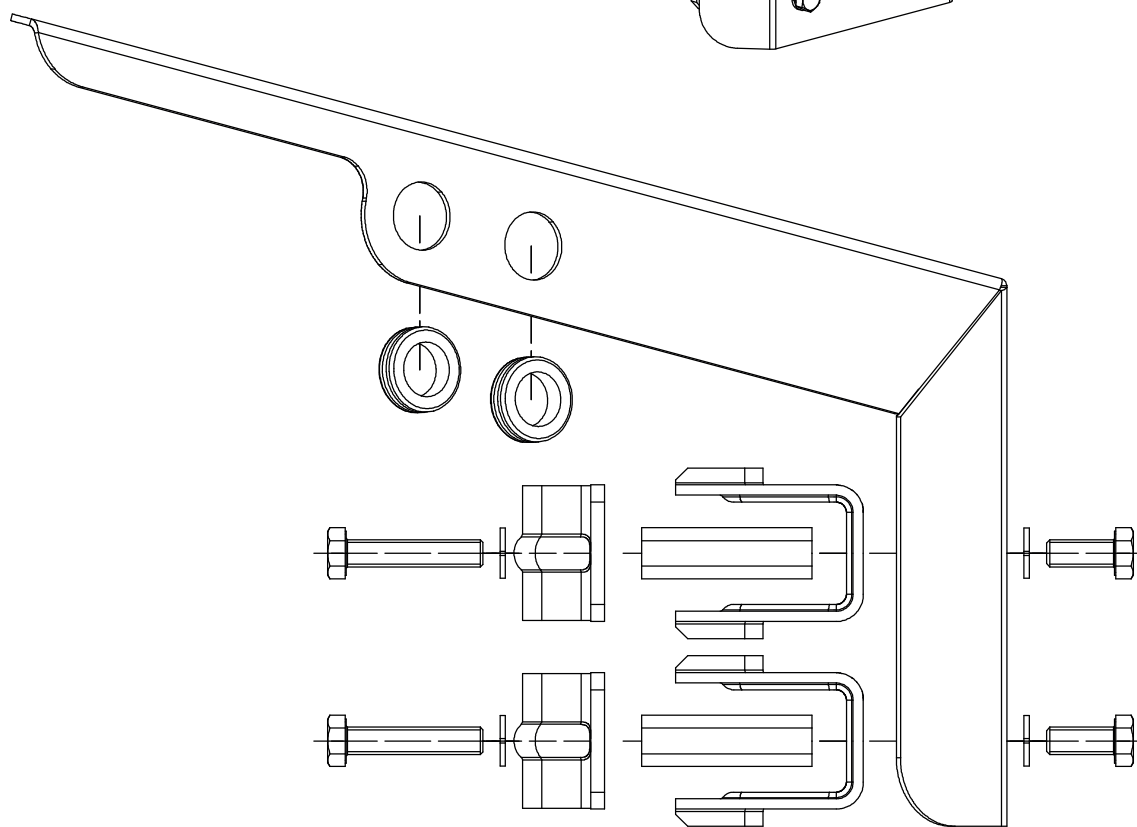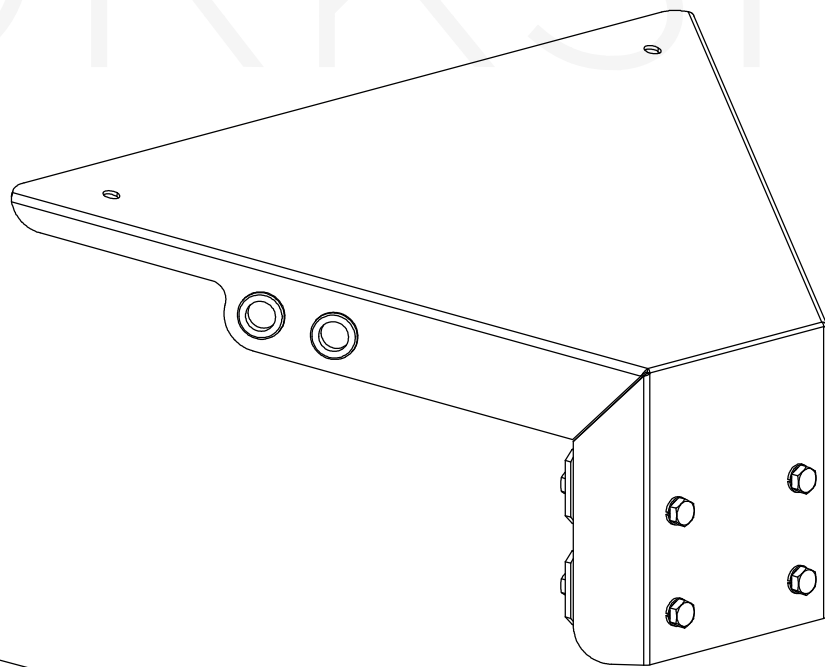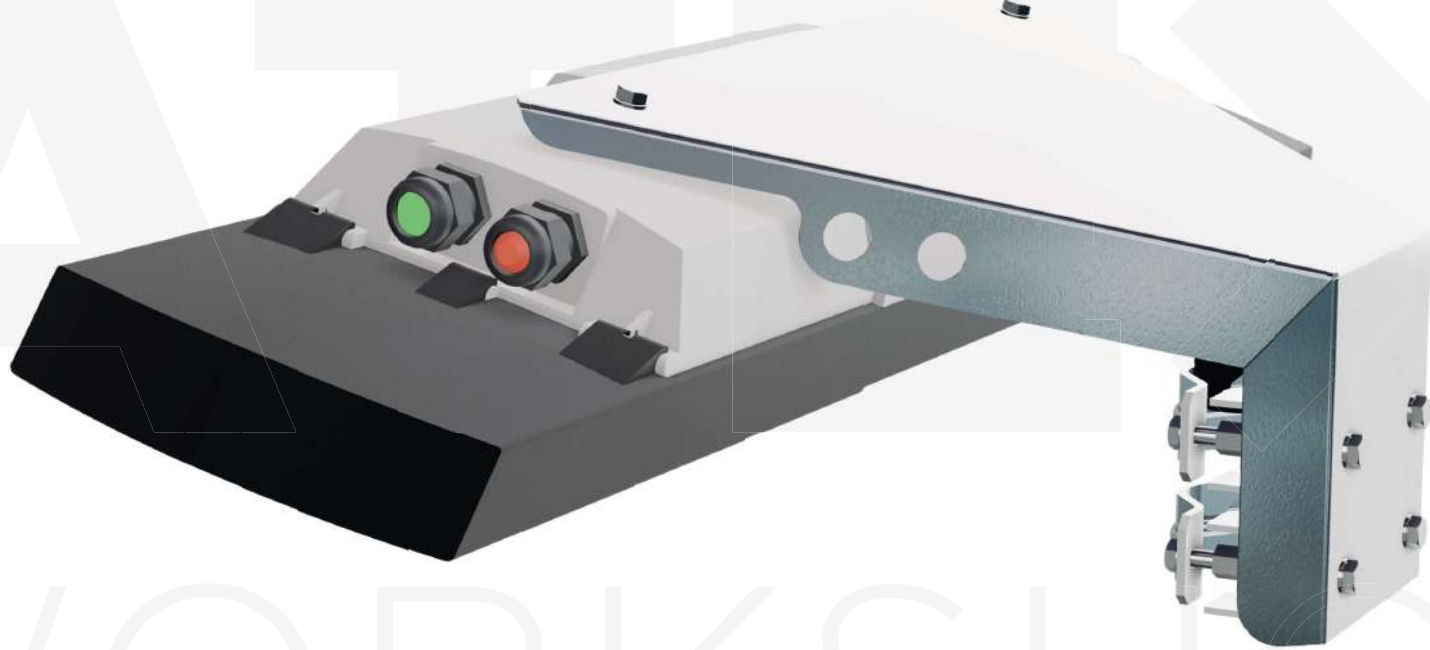



explosion
proof
experts

ATEX
WORKSHOP

ATEX Workshop B.V.
Hofkamp 30
6161 DC Geleen
+31 46 303 09 08
www.atexworkshop.com

BT-Ex1-090F-W for Ex-Lin 3L-5L 1

  holder across, 90 degrees / for wall mounting

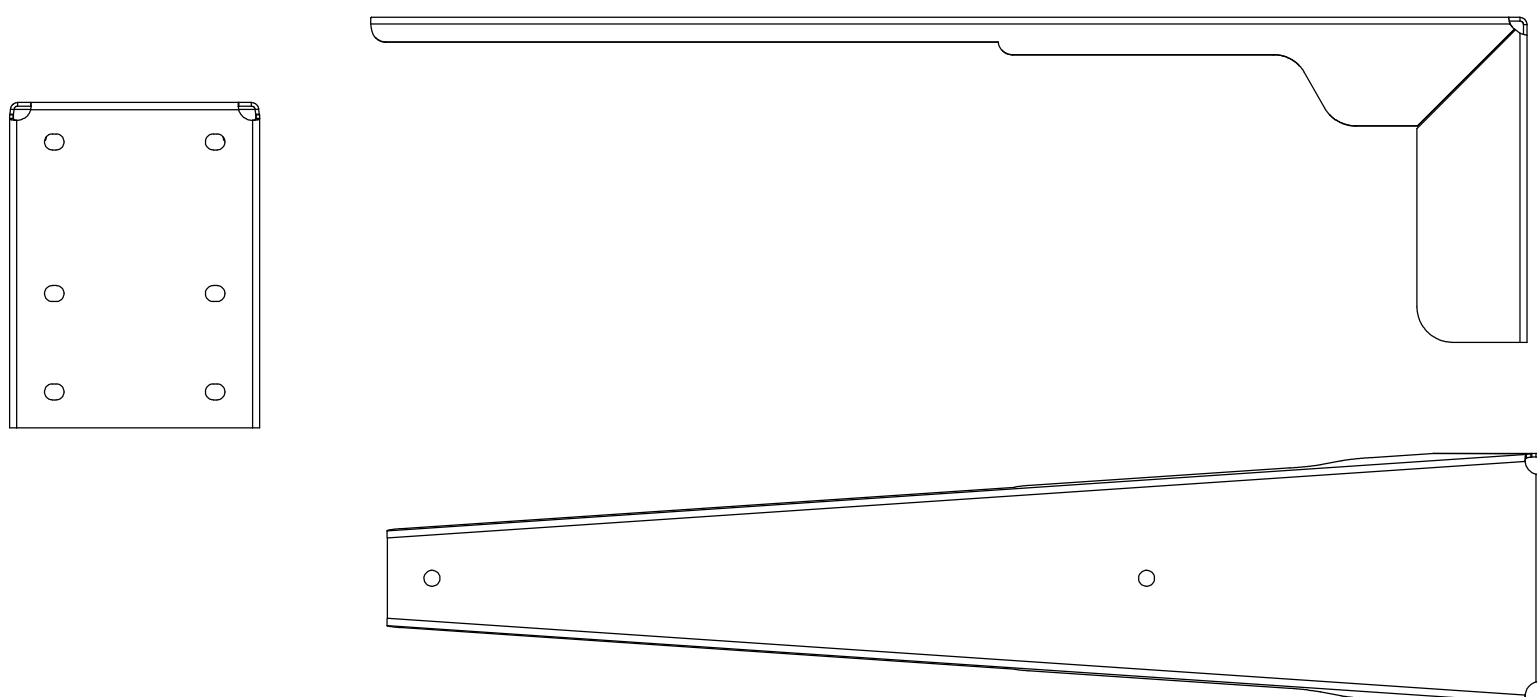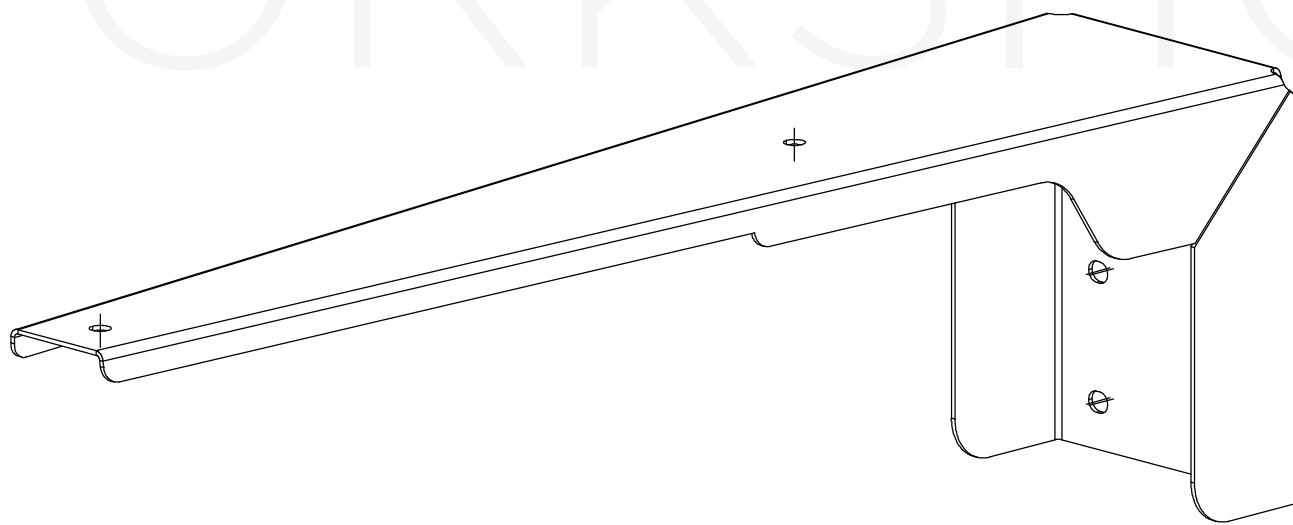





explosion
proof
experts

ATEX
WORKSHOP

ATEX Workshop B.V.
Hofkamp 30
6161 DC Geleen
+31 46 303 09 08
www.atexworkshop.com

BT-Ex1-105F-W for Ex-Lin 3L-5L 1

    holder across, 105 degrees / for wall mounting

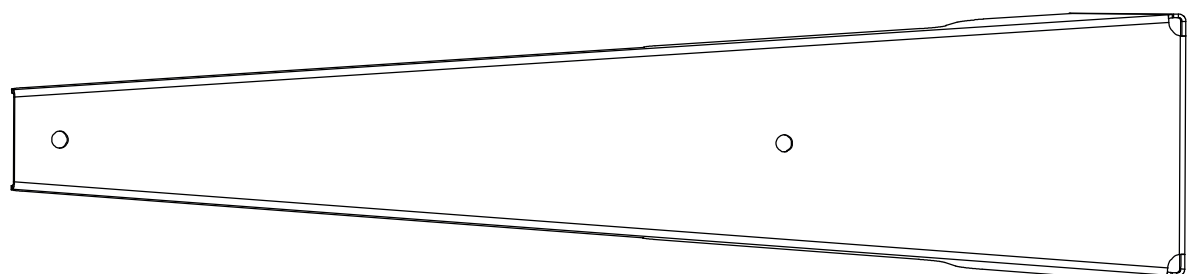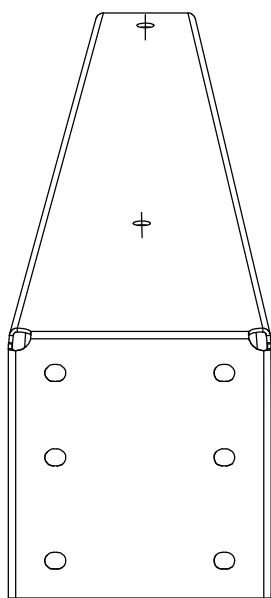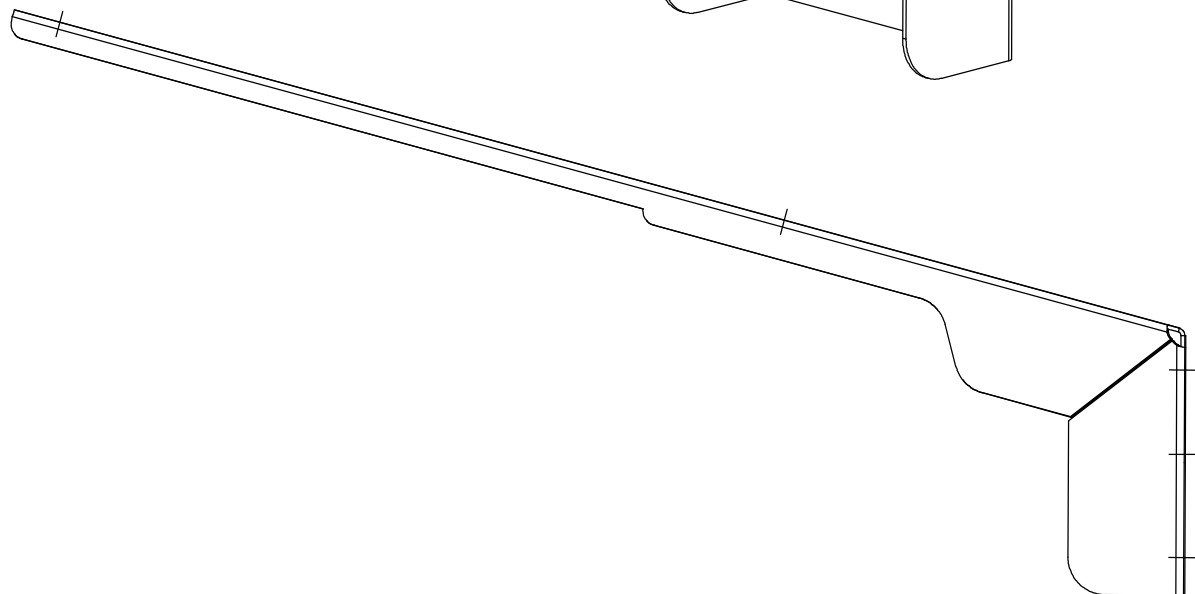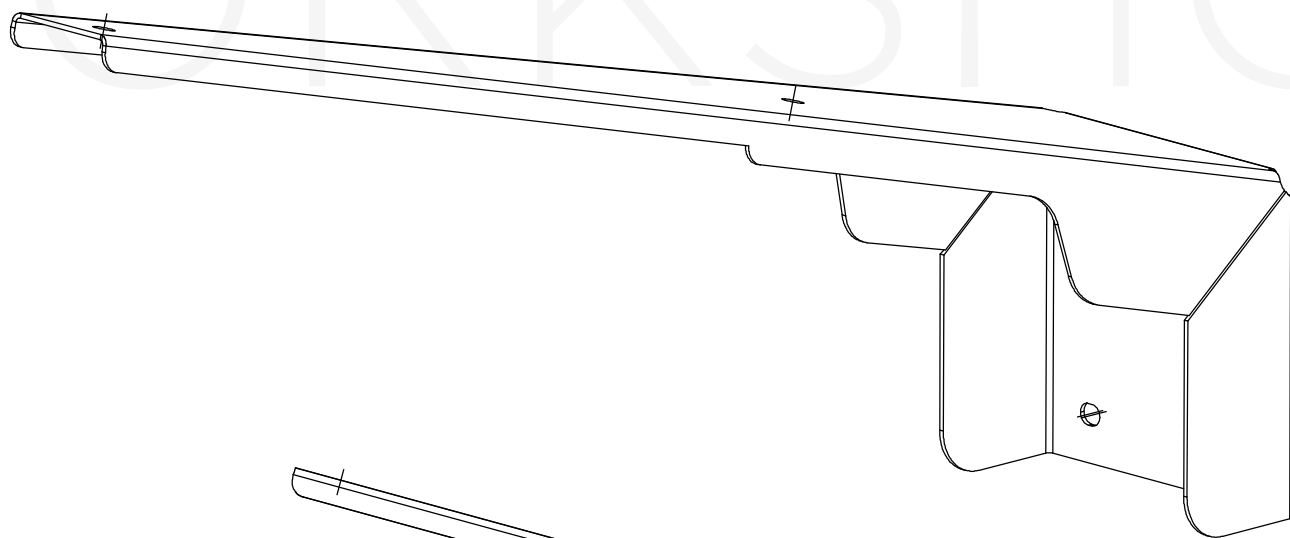


explosion
proof
experts

ATEX
WORKSHOP

ATEX Workshop B.V.
Hofkamp 30
6161 DC Geleen
+31 46 303 09 08
www.atexworkshop.com

BT-Ex1-120F-W for Ex-Lin 3L-5L 1

 holder across, 120 degrees / for wall mounting

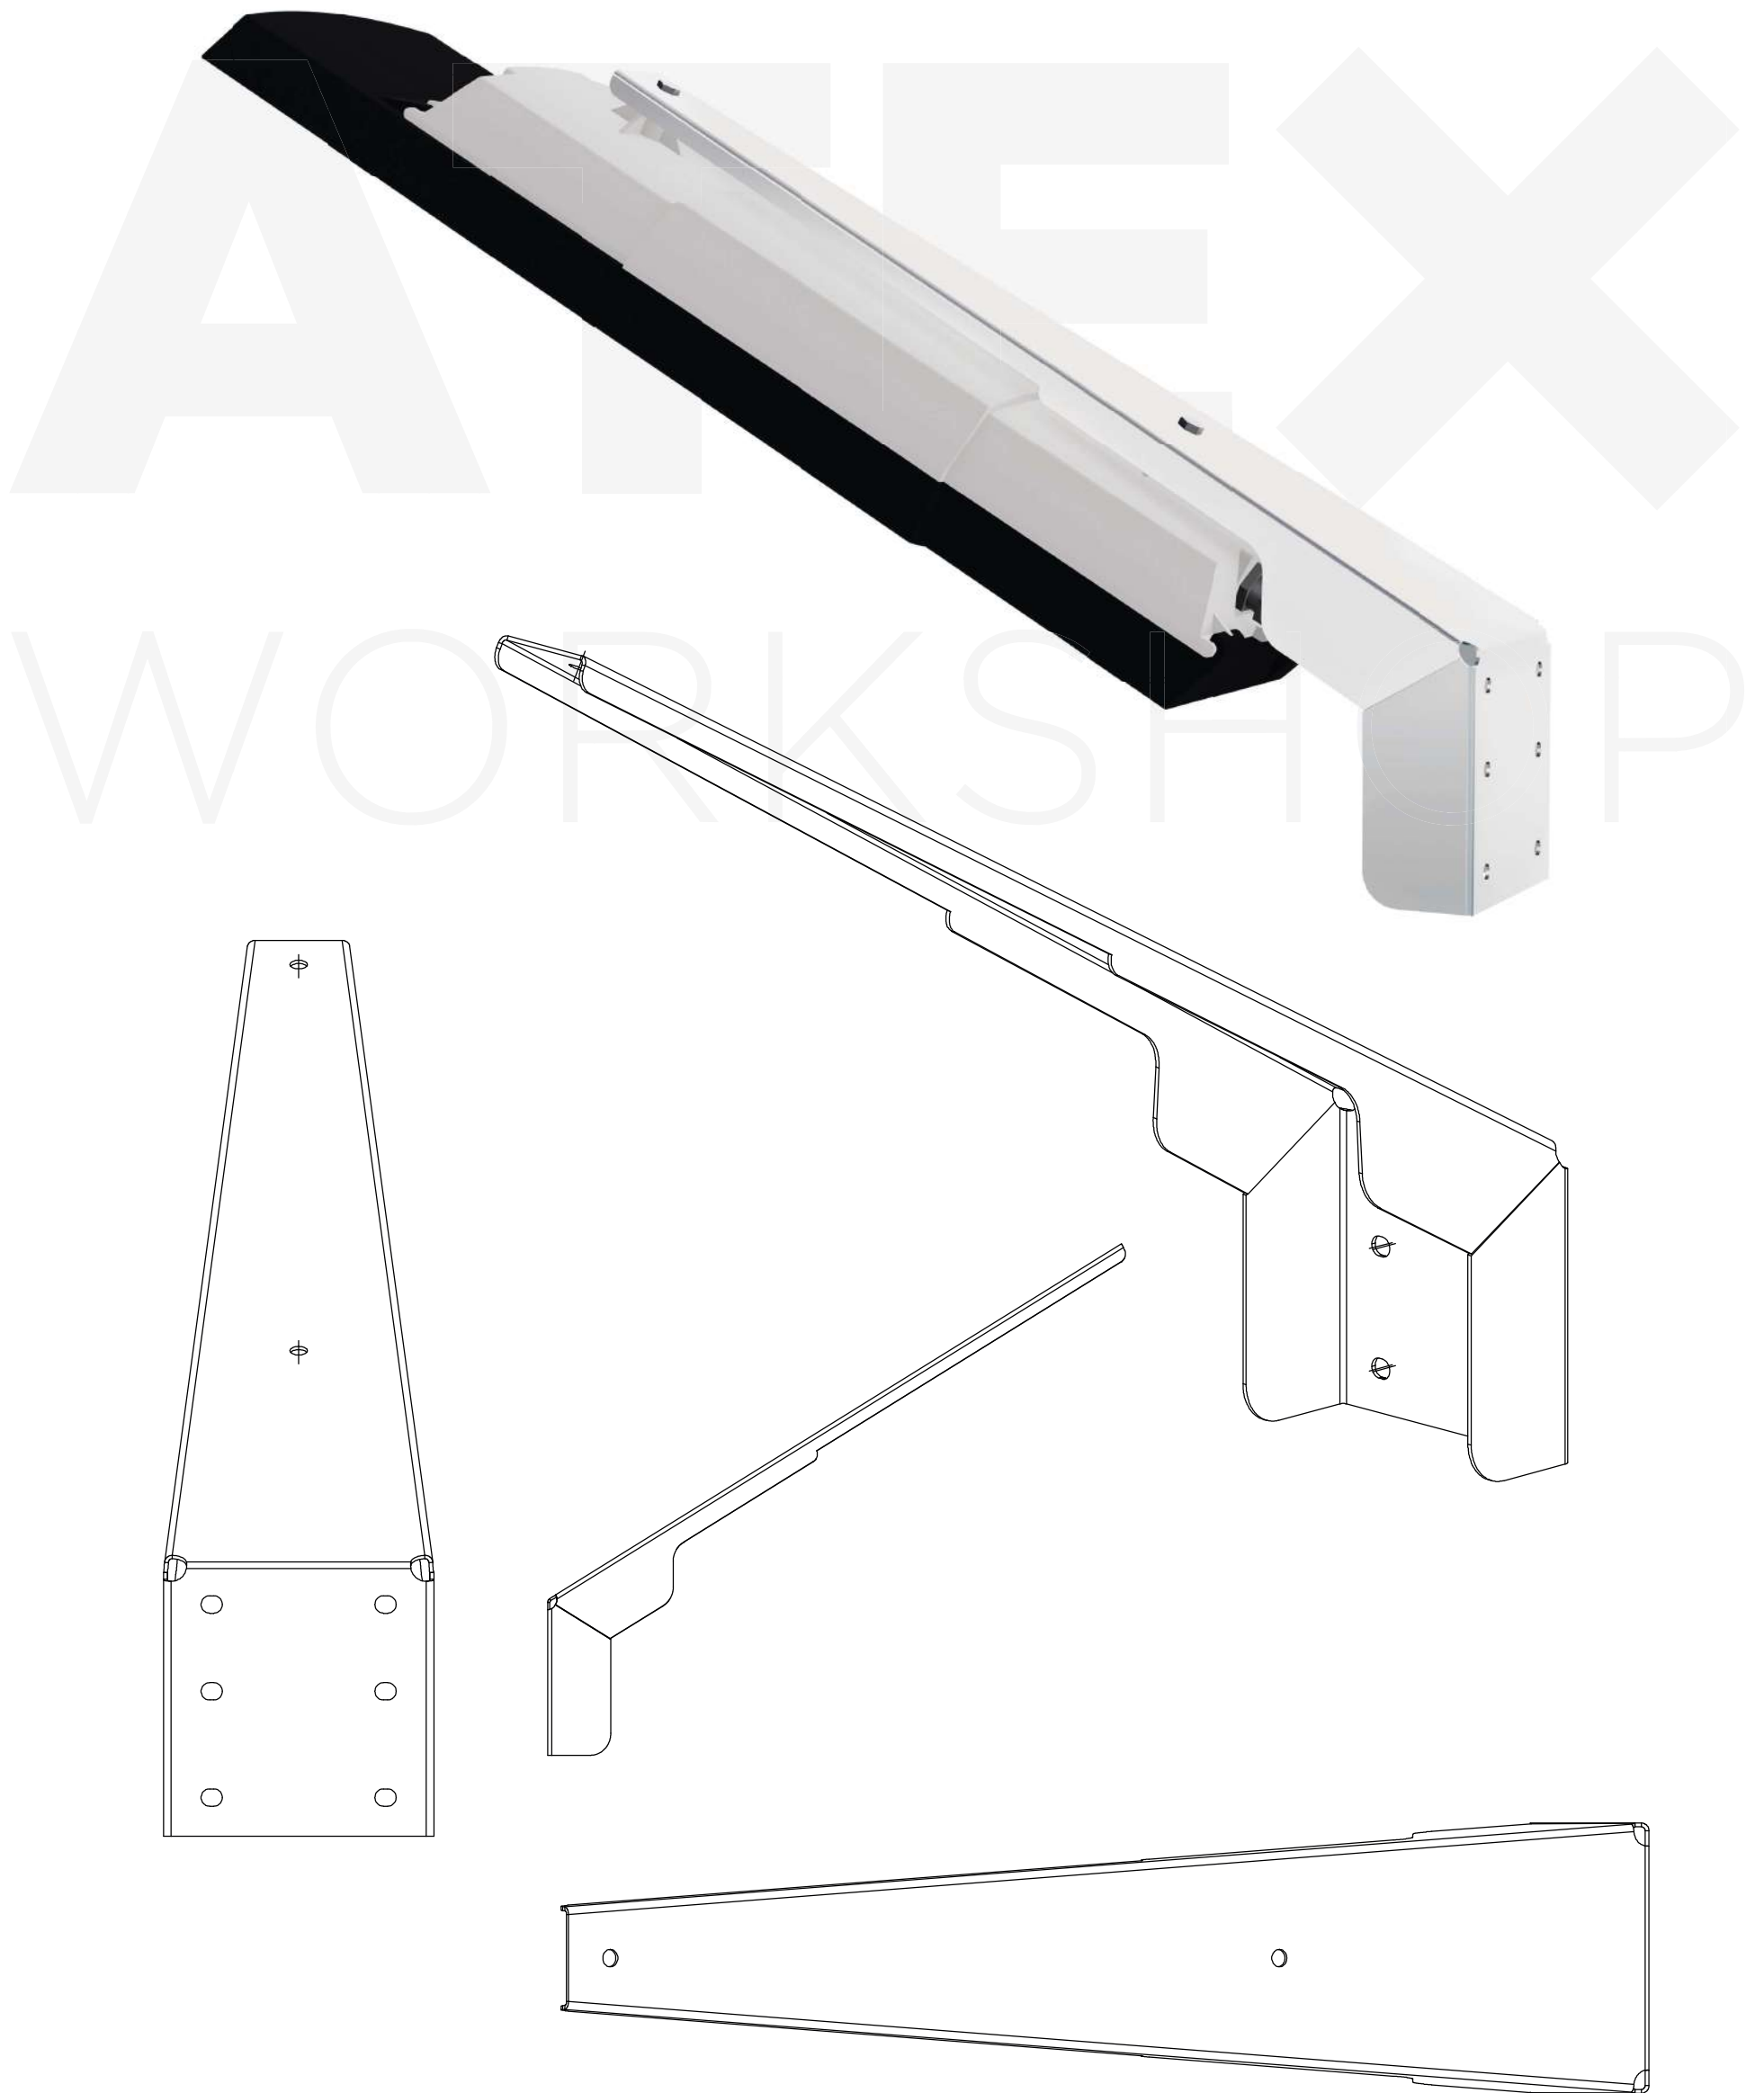





explosion
proof
experts

ATEX
WORKSHOP

ATEX Workshop B.V.
Hofkamp 30
6161 DC Geleen
+31 46 303 09 08
www.atexworkshop.com

BT-Ex2-090F-W for Ex-Lin 5L-10L 2

    holder across, 90 degrees / for wall mounting

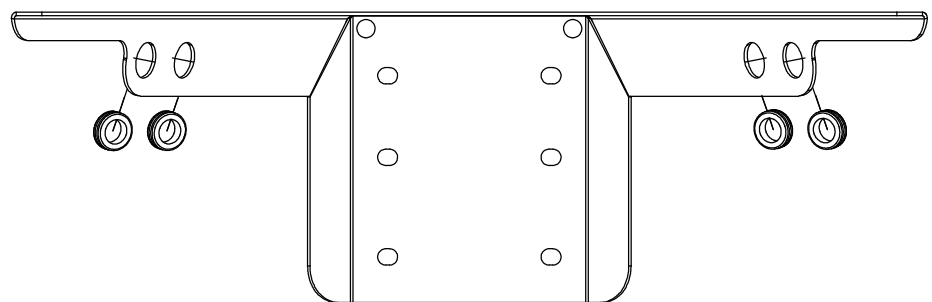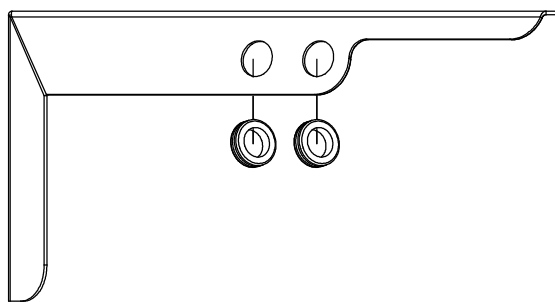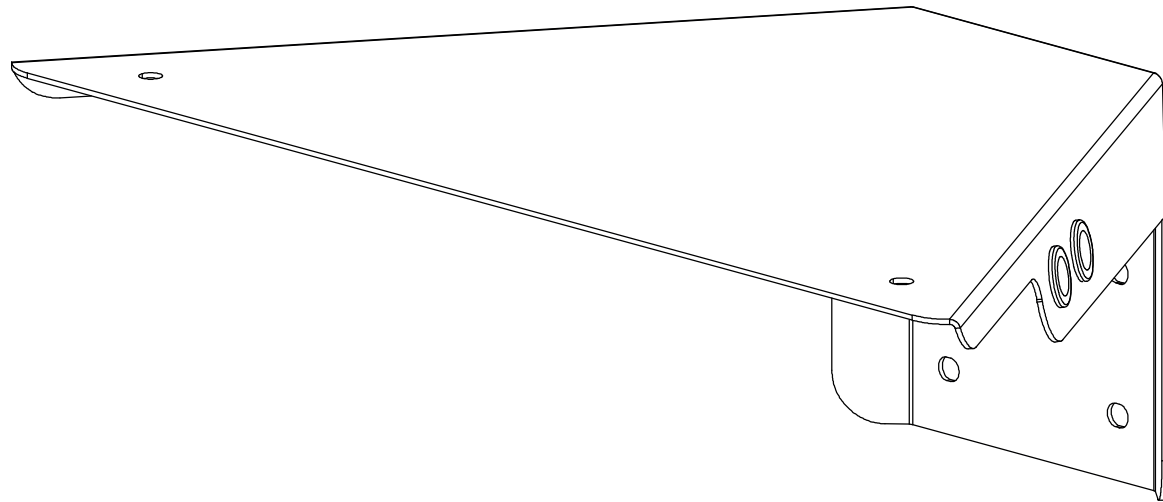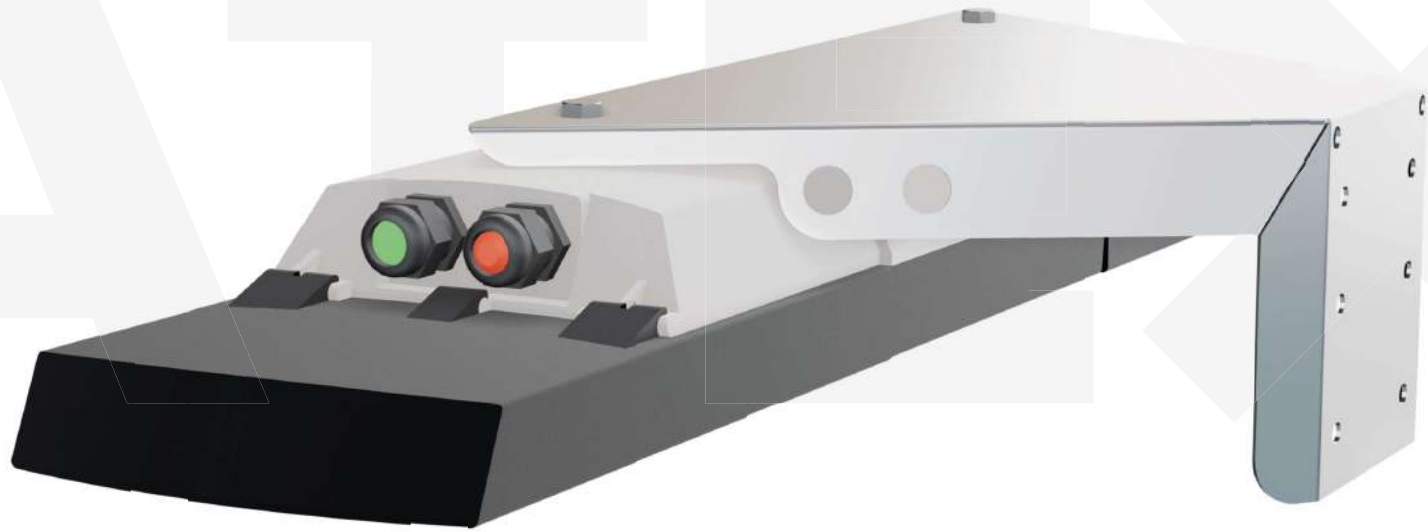




explosion
proof
experts

ATEX
WORKSHOP

ATEX Workshop B.V.
Hofkamp 30
6161 DC Geleen
+31 46 303 09 08
www.atexworkshop.com

BT-Ex2-105F-W for Ex-Lin 5L-10L 2

   holder across, 105 degrees / for wall mounting

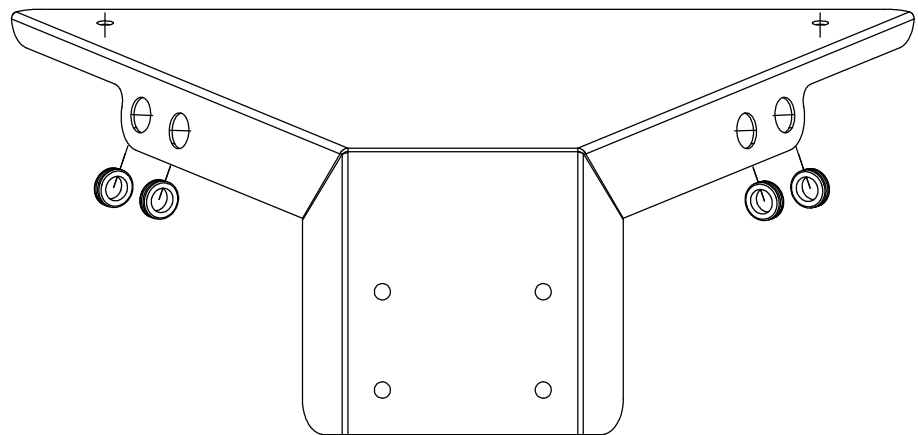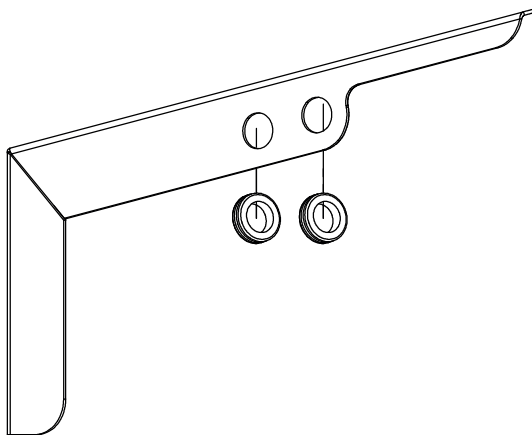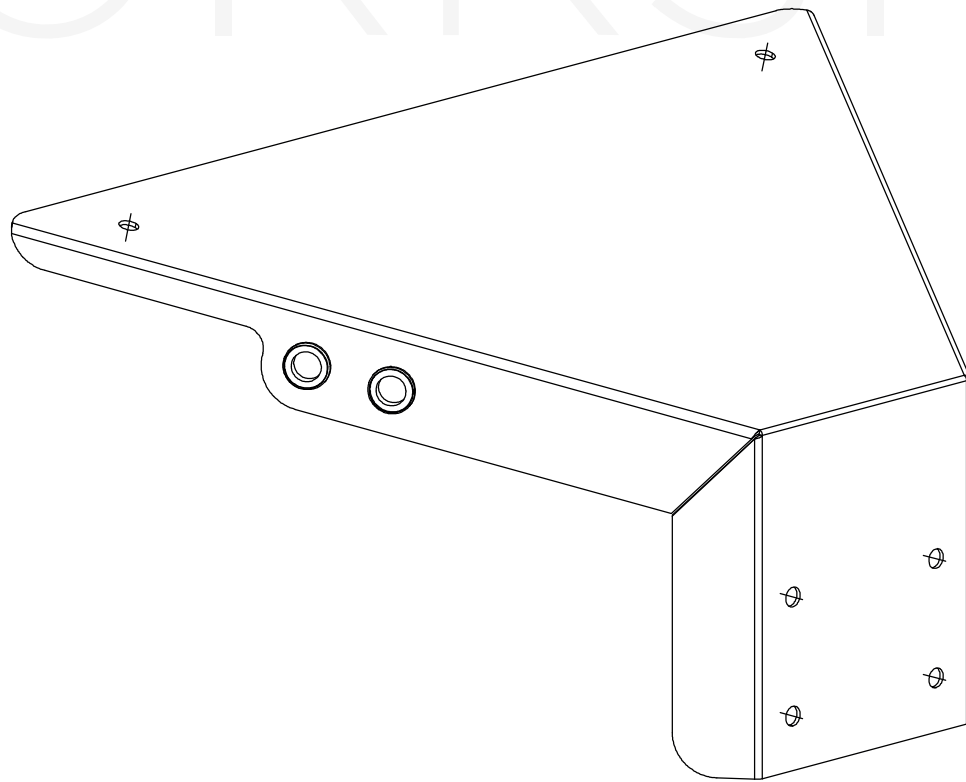

explosion
proof
experts

ATEX
WORKSHOP

ATEX Workshop B.V.
Hofkamp 30
6161 DC Geleen
+31 46 303 09 08
www.atexworkshop.com

ATEX

WORKSHOP

explosion
proof
experts

ATEX
WORKSHOP

ATEX Workshop B.V.
Hofkamp 30
6161 DC Geleen
+31 46 303 09 08
www.atexworkshop.com